

**ENGLISH  
MANUAL**

**24Kupi.com**

**SUPER PEN**

## **ACCEPTED DOCUMENTS AND COMPATIBILITY**

-RX0 and TXT files can be transferred from MAC or Windows directly.

-The PDF, WORD, HTML, HTM, LIT and CHM files can be transferred only by Windows, using the "RXO Pen v1.0" software converter and then you will copy the generated RX0 files to the pen easily.

Details:

\* In case a PDF or WORD document includes some images, these will not be displayed, leaving an empty space in that document.

\* Make sure that the PDF and WORD documents are text, and are not scanned or photographed images of a text, since in this case it would be an image document and not a text document.

## **RXO CONVERTER SOFTWARE Pen v1.0 (Check pen-drive)**

1. Install the converter software called "**Setup\_RXO Pen v1.0**".
2. Move the pen switch to OFF, connect it to the PC using the USB cable and wait a few seconds for it to be recognized.
3. Open the program. Then click on "Load document" and select the document that you want to visualize in the pen. You can view the following types of documents:  
PDF, DOC, DOCX, TXT, HTM, HTML, LIT, CHM.  
GOOD !!: You can view 90% of blocked PDF. There are many PDF files from which text cannot be extracted but the RXO software can unlock them, while convert them so you can visualize them in your pen.
4. Click on "convert to RXO" (The RX0 file will be saved on your desktop)

5. Copy the RX0 files from your desktop and paste them into your pen (same as a pen-drive) or click on "Copy to Pen" and choose the "RXO Pen" unit.

6. Finally, click on "Safely Remove Hardware" in the lower Windows taskbar. Then click on eject disc.

Then you can disconnect the cable, otherwise you can cause irreversible damage to the pen.

7. Move the pen switch to ON. Wait for 5seconds, and later, unlock the pen by pressing "PLAY" for 6 seconds.

### **FORMULAS AND SYMBOLS:**

Access the "Symbology" folder and install the software.

Select the symbol and paste it into the document you are writing.

Anyway, we have included a TXT file in the Pen-drive to open with Notepad and ARIAL Typeface from where you can also copy and paste symbols to the document you are writing.

### **TRICKS:**

This pen does not accept sorting in folders, but you do not need it!, since if you want to sort the documents to easily find them in the pen, you only need to rename the files for example like this:

History\_part1, History\_part2, History\_part3, Maths\_part1, Maths\_part2

### **BATTERY:**

Battery charge: 1h. (This pen doesn't show the battery level)

Duration of the newly charged battery 10-15h.

**IMPORTANT:** Do not store the pen for a long time without using it. The battery should be charged at least once a month to avoid deterioration.

### **HOW TURN ON THE PEN:**

Move the switch to ON, wait 5 seconds, then press the "PLAY" button for 6 seconds.

### **SEARCH AND OPEN TEXT DOCUMENTS:**

Use the "+" and "-" buttons to scroll through the files in memory.

To open a document press the "PLAY" button

To exit a document and return to the selection press the "PLAY" button

### **PAGES ADVANCING OF TEXT DOCUMENTS:**

This pen includes automatic advance regulation for 4 Speeds: Speed1, Speed2, Speed3, Speed4. To set the speed you want, press "PLAY" for 2 seconds while you are viewing one document. Anyway this pen also includes the manual advance function pressing the "+" and "-" buttons.

### **EMERGENCY BUTTON:**

When you are viewing or selecting a document, press "-" for 2seconds and the screen will turn off by blocking all the buttons.

To unlock the pen and continue reading the document on the same page you were reading before pressing the emergency button, you must press "PLAY" for 6 seconds.

### **HOW TO INCREASE or DECREASE BRIGHTNESS:**

The display can show 3 brightness levels, press "+" during 2 seconds each time to set the brightness level you want.

### **HOW TURN OFF THE PEN:**

Move the switch to OFF. when you turn ON again, it does not save the page position of the document you were reading. To turn it ON again, we remind you to move the switch to ON, wait 5 seconds, then press the "PLAY" button for 6 seconds.